



WC4-707

1-01	Frame	1	1-22	Fixing Central Axle	1	1-43	Screw	1	4-09	Attack Block	1
1-03	6 Shots Drum	1	1-23	Axial Gear	1	1-44	Screw	4	7-01	Piercer Seal	1
1-04	Outer Grip	1	1-26	Barrel Adapter	1	1-45	Screw	1	7-02	Chamber	1
1-05	Inner Grip	1	1-27	Valve Seal	1	1-46	Screw	1	7-03	Seal	1
1-06	Drum Seat	1	1-28	Front Barrel Tip	1	1-49	Safety Spring	1	7-04	Valve Spring	1
1-07	Frame Cover	1	1-29	Internal Barrel	1	1-50	Knob Fixing Block	1	7-05	Filter	1
1-08	Sight Seat	1	1-30	Hammer Pusher Spring	1	1-51	Pusher Spring Stopper	1	7-06	Piercer	1
1-09	Sight	1	1-31	Axial Spring	1	3-01	Outer Barrel(L)	1	7-07	Piercer Fixing Ring	1
1-10	Trigger	1	1-32	Drum Spring	1	3-02	Outer Barrel(R)	1	7-08	Valve	1
1-12	Safety	1	1-33	Trigger Spring	1	3-06	Spring Ban	2	7-09	Chamber Cover	1
1-13	Safety Parts	1	1-34	Internal Barrel Spring	1	4-01	Hammer	1	7-10	Washer	1
1-14	Safety Level	1	1-35	Safety Parts Spring	1	4-02	Catch Parts	1	7-11	O Ring	1
1-15	Hammer Spring Seat	1	1-36	Rear Sight Spring	1	4-03	Hammer Connector	1	7-12	Copper Ring	1
1-16	Pushing Parts	1	1-38	Trigger Spring	1	4-04	Hammer Pusher	1	7-13	Aluminum Seal	1
1-17	Trigger Connector	1	1-39	Spring Ban	2	4-05	Hammer Parts Spring	1	5	Bullet	6
1-18	Mag. Stopper	1	1-40	Axis	1	4-06	Axis	1	8A	Piercing Level Combination	1
1-19	Washer	1	1-41	Axis	1	4-07	Screw	1			
1-21	Frame	1	1-42	Adjusted Screw	1	4-08	Axis	1			