



STEYR SCOUT ELITE

6MM BOLT ACTION SNIPER RIFLE INSTRUCTION MANUAL

WARNING!

+18 NOT A TOY. USER RESTRICTED TO 18 YEARS OF AGE OR OLDER.



ALWAYS KEEP THE AIRSOFT GUN POINTED IN A SAFE DIRECTION.
THIS AIRSOFT GUN MAY CAUSE SERIOUS INJURY IF MISUSED OR MISHANDLED.

 


ALWAYS READ THROUGH ALL INSTRUCTIONS BEFORE USING.




THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING OWNERSHIP,
TRANSPORT AND USE OF AIRSOFT GUNS.

Steyr Scout Elite Bolt Action Sniper Rifle

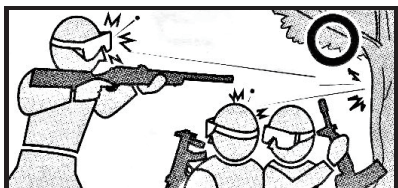


Always wear eye protective gear.

 When shooting airsoft gun for a target or game, you and all participants, you and all participants must wear goggles or other eye protective gear, also paying attention to ricochets. (Pay sufficient attention also to third personnel other than participants.)

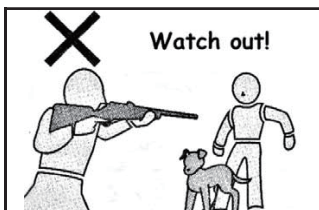

 Never aim or shoot a person or animal as the target.

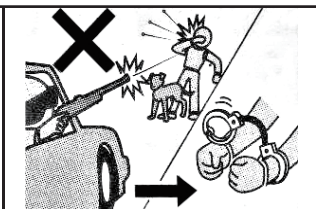


Never shoot as joking, always look before shoot, careless use may cause injure and be punished.




Never shoot airsoft gun at places where people and cars pass cross.



 
Never look into gun muzzle.

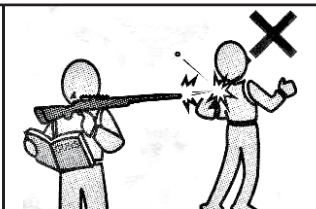


Avoid pulling the trigger carelessly.

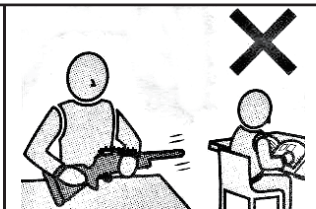 

 
Always keep airsoft gun pointed in safe direction.

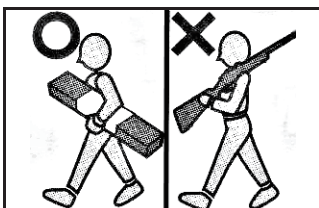

 
Do not carryout in public place, put into a case or bag for carrying.

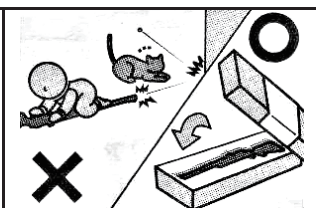

 
Store airsoft gun at places out of reach by children.

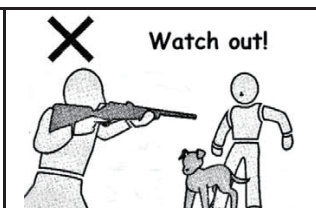

 BB pellets may be shot out even if the magazine is removed.

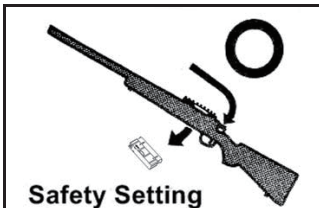

 Always set the selector lever to Safety position until ready to shoot. Always keep airsoft gun unloaded until ready to use.

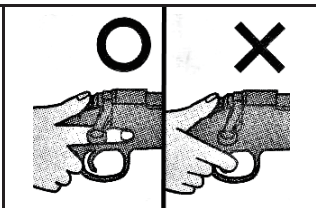

Always keep your fingers away from trigger until ready to shoot.



 
Never disassemble or modify airsoft gun, to avoid causing troubles and dangerous.

WARNING!

- The operation procedure varies according to the model. Make sure to operate an airsoft gun after recognizing its features.
- We are not responsible for any accidents, events, injuries or repair costs arising from wrong operation and handling or by modification and disassembly of the gun.
- Repair cost is payable if user damages product with DIY work.

1

SPECIFICATIONS


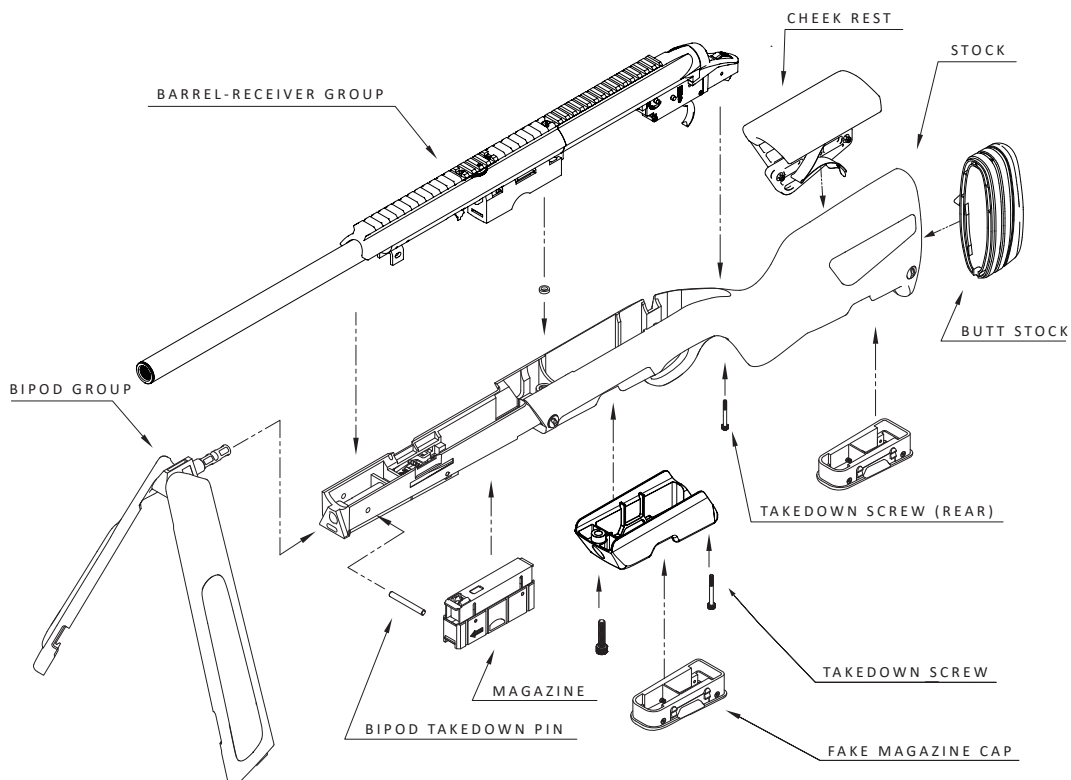


WEIGHT (without mag)	3.1 kg
LENGTH	1090 mm
BARREL LENGTH	450 mm
BARRLE CALIBER	6.03 mm
HOP UP ADJUSTMENT	TDC
MAGAZINE	32 rds
COLOR	BLACK
PELLET TYPE	6 mm BB
INITIAL SPEED (Normal)	426 FPS (130 m/s) with M120

2


SAFETY

Press the white button and roll forward to release the safety. It is armed (firing ready) if the red mark appears.

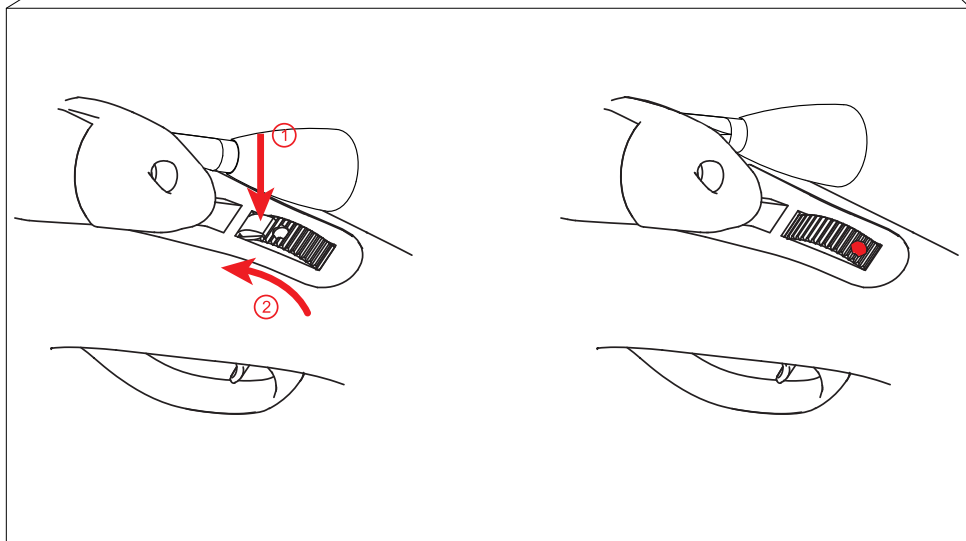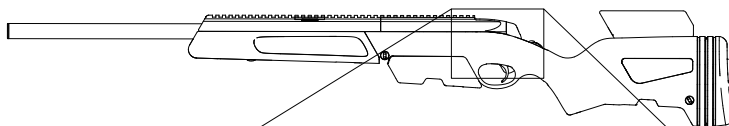


3

BI-POD

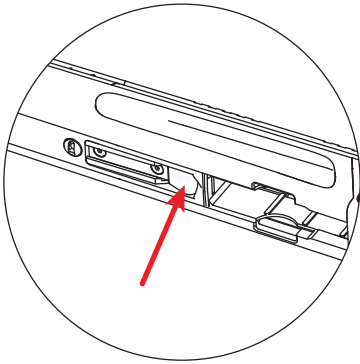

Push on the bipod release switch to drop it down. Simply push it back up to retract.


**The bipod is a moving part so repeated use typically causes wear.*

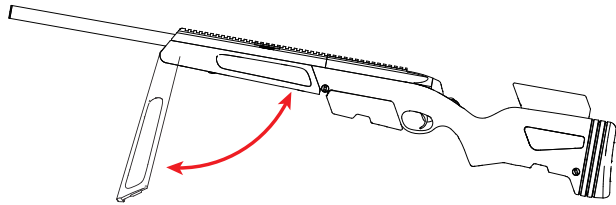

4


BUTTSTOCK & CHEEK REST ADJUSTMENT

Adjust the buttstock and cheek rest position by tightening/loosening the adjustable screw at the right side of your rifle.

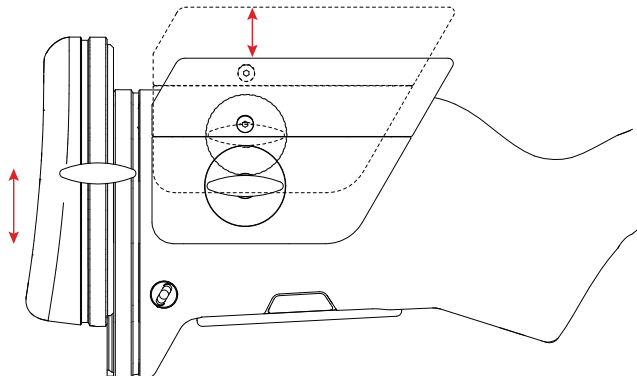

5


MAGAZINE INSTALLATION

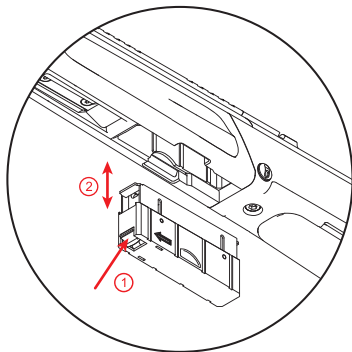

Main magazine

Simply snap the magazine into place as necessary. Press the magazine release button to remove it.

**Non-compatible with MOD24 standard magazine, which can only be used by changing the magazine inner case.*

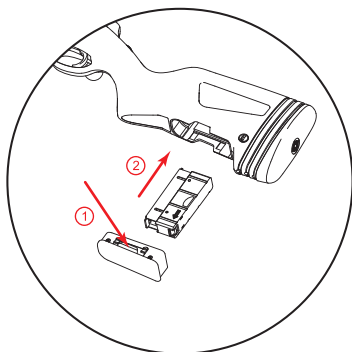


Spare magazine

Press the 2 side buttons to remove the dust cover. Insert the spare magazine vertically into the buttstock.

6

REFILLING BBS




Press on the magazine to let magazine feeding lip pop out (1). Aim the BB filler to the feed lip on the magazine (2). Start refilling BBs into the magazine (3). Push BBs in place with the pusher or rod (4).

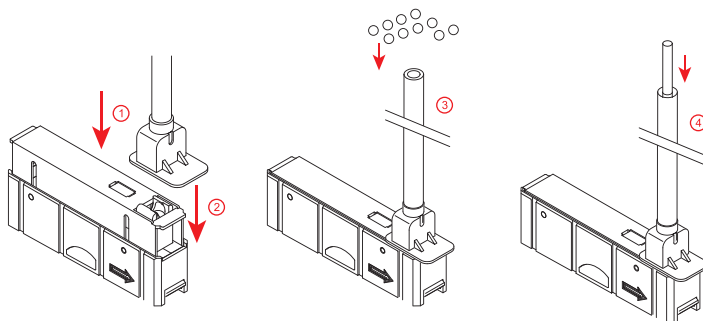

7



READY TO FIRE

Pull up on the charging handle and then pull all the way back to load .
With the action in place, make sure the charging handle is secure in position before firing. (Not available on Safety)

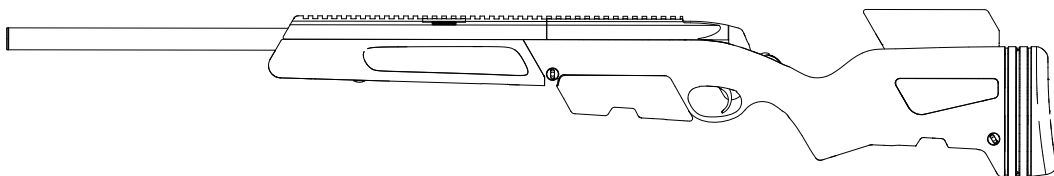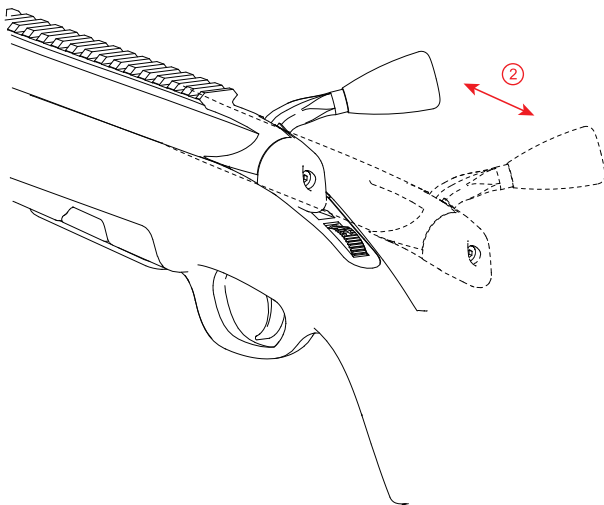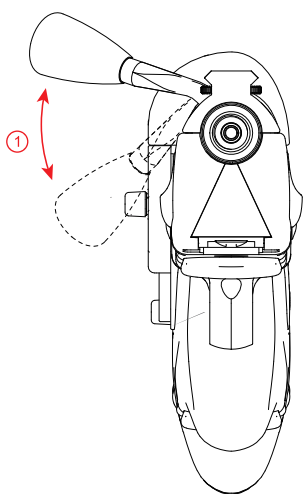

8 HOP UP ADJUSTMENT


The TDC adjustable wheel with positive feedback gives you 120+ positions for a more precise shooting experience.
Clockwise to increase the hop-up.
Counterclockwise to decrease the hop-up .

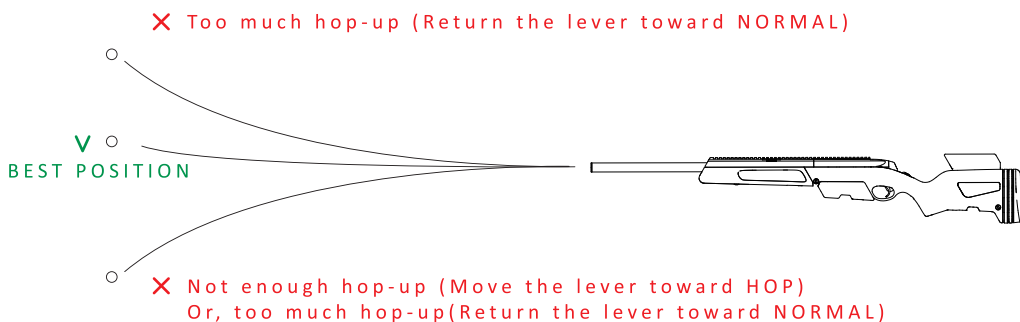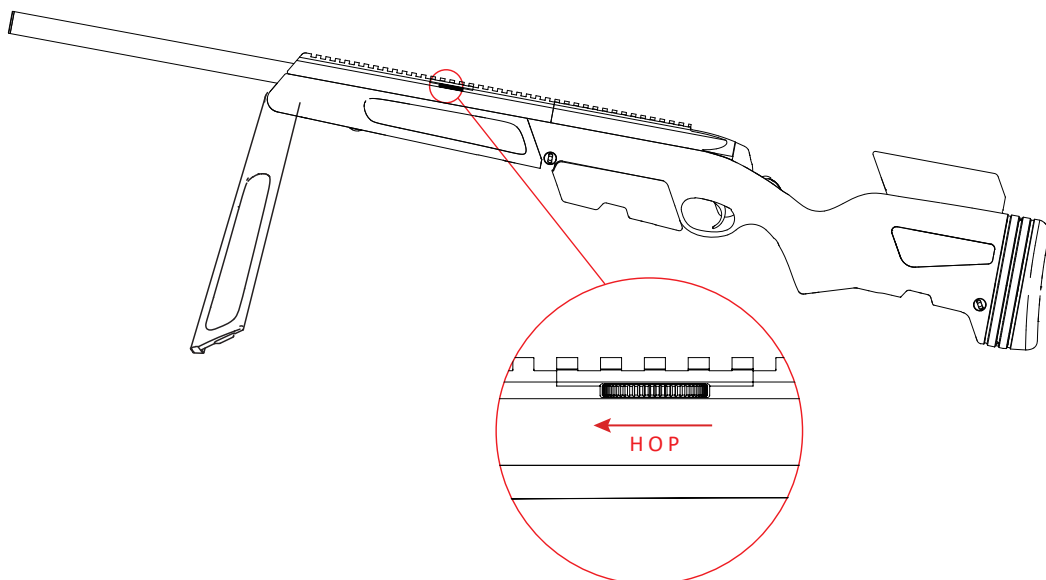


9

MAINTENANCE

Drop a few drops of silicone oil from the pellet entrance, then fire pullets equivalent to 1 or 2 maganzine. Use the cleaning rod(with cotton) as shown below, to remove the excess oil to complete the miantenance.

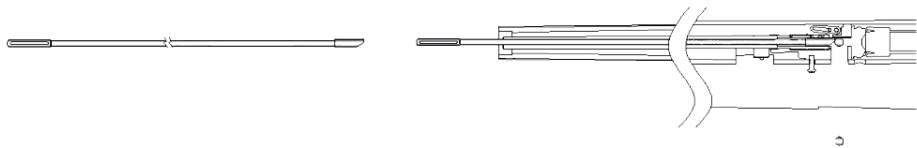

Always begin the maintenance by returning the hop up adjustment lever to the Normal (HOP off) position. The inside chamber is a precision component, it can be damaged easily. Be careful during maintenance. Never use any used pellets.

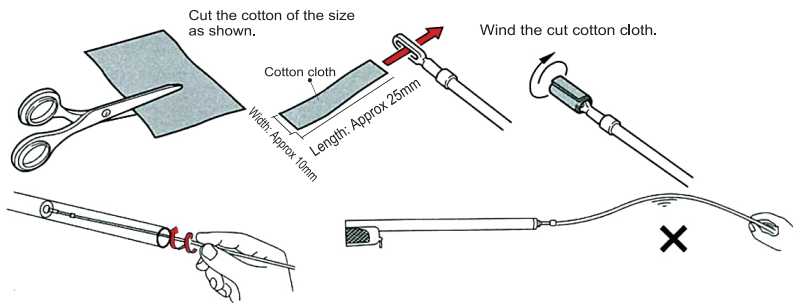


How to use a cleaning rod

Cut a cotton cloth to the size as shown and insert one end into the hole in the rod.(Adjust the length of the cloth for smooth entry into the barrel.)

10

Q&A

Is it a VSR10?	It is not VSR10 compatible.
Is it a MOD24 system?	Yes, but with the Bore-Up cylinder system.
Is it interchangeable with the MOD24 magazine?	Its Magazine inner case does not fit.
Are the parts interchangeable with that on the MOD24?	It is compatible with trigger unit, hop up chamber and inner barrel.
Hop up bucking recommendation?	Predator hop up bucking.
How to fix stuck BBs?	Pull back the bolt to full stop. Then dislodge BBs with a cleaning rod.
How to fix poor trajectory?	Clean the barrel, check the airtight and then adjust the hop up as necessary.
How to fix a broken airsoft gun?	Hand it over to the nearest distributor or tech. DO NOT DIY to avoid warranty problems.
Can I switch the Elite upper to my airsoft Steyr Scout?	Yes, you can.

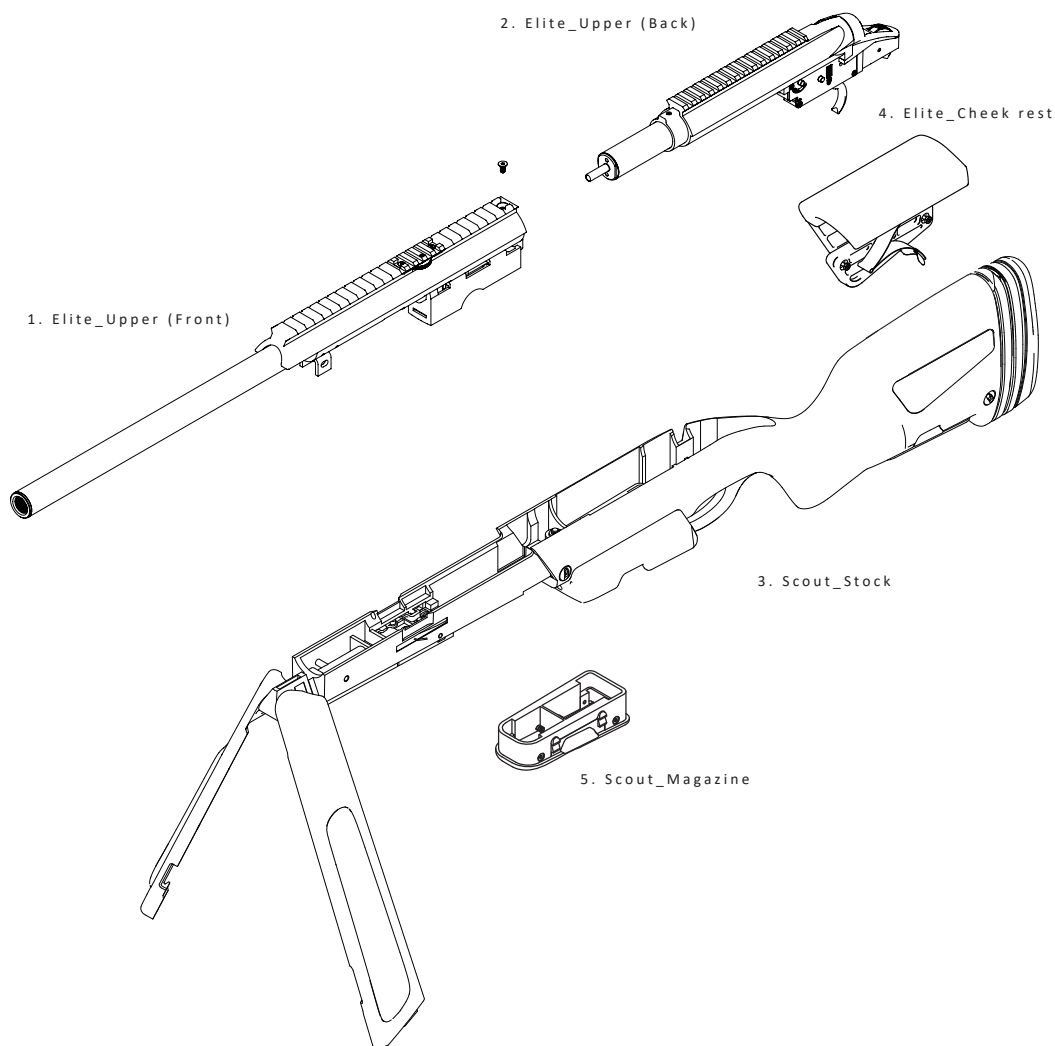

Scan the QR-code
to view the detail.
(中文版連結)

 


Modify Airsoft
Owners Group




[Steyr Scout]
How-To

01

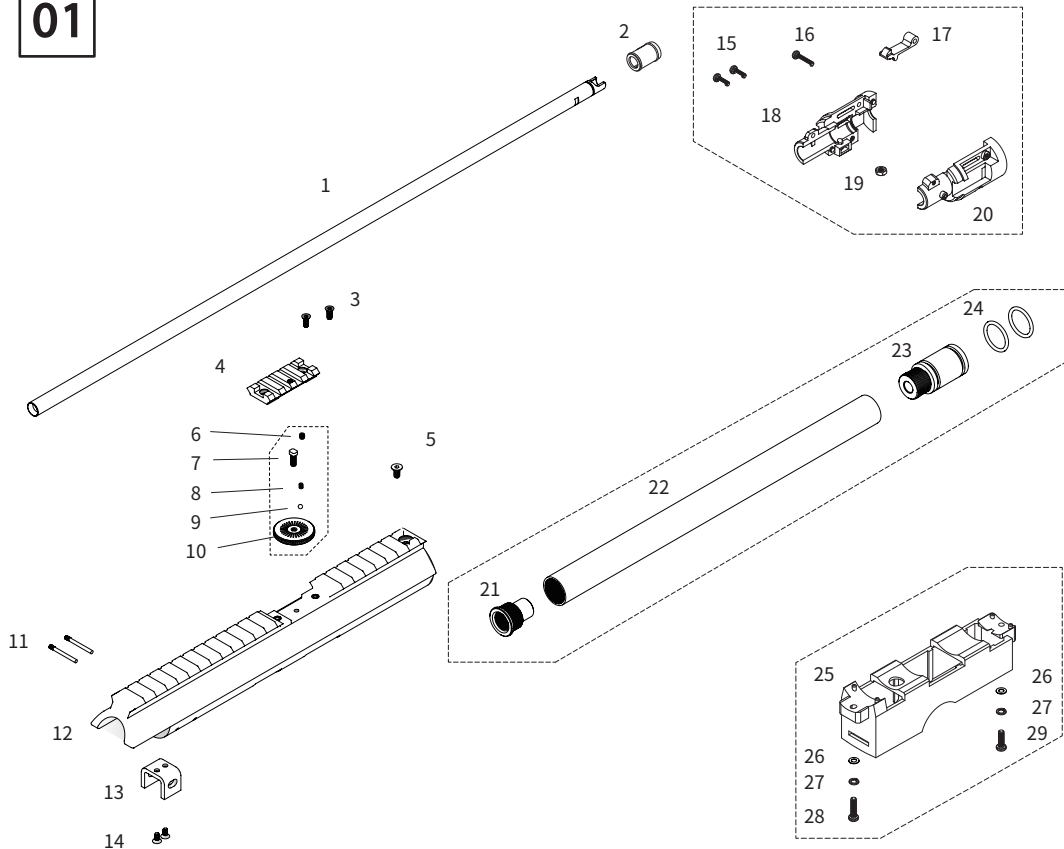**01-1** Inner Barrel**01-2** Predator Hop Up Bucking**01-3** M3x6 Top Rail Screw (2 pcs)**01-4** Top Rail**01-5** M4x8 Combine Screw**01-6** M3x5 Adjust set Screw**01-7** M3 Wheel Screw**01-8** Nub Spring**01-9** Position Nub**01-10** TDC Wheel**01-11** Barrel Combine Pin (2 pcs)**01-12** Front Receiver**01-13** Combine Bridge**01-14** M3x6 Combine Screw (2 pcs)**01-15** M2.5x8 Screw (2 pcs)**01-16** M2.5x12 Screw**01-17** Hop Up Arm**01-18** Hop Up Chamber (right)**01-19** Chamber Nut**01-20** Hop Up Chamber (left)**01-21** Barrel Front Cap**01-22** Outer Barrel**01-23** Barrel Mount**01-24** O-ring (2 pcs)**01-25** Magazine Well**01-26** Washer (2 pcs)**01-27** Washer (2 pcs)**01-28** M3X12 Combine Screw**01-29** M3X10 Combine Screw

 02

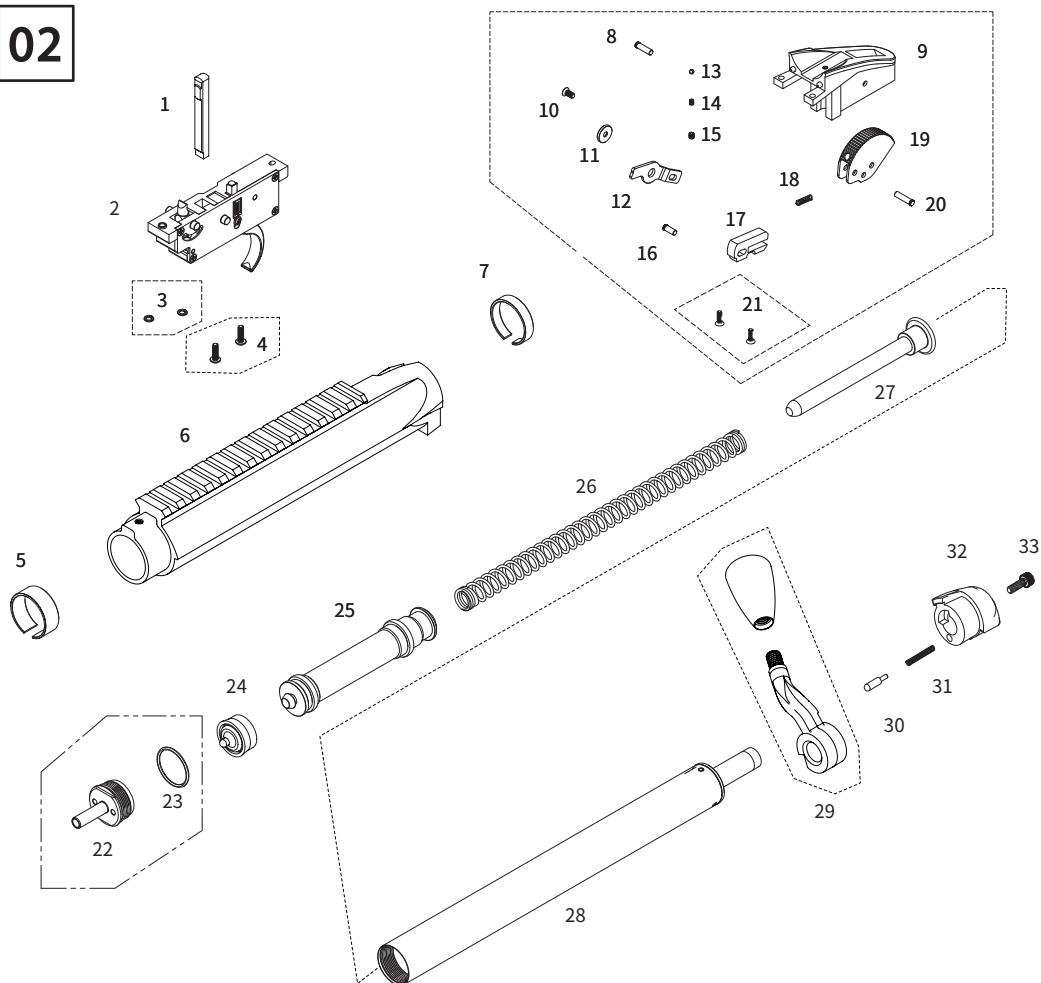

02-1 Spring Guide Stopper

02-2 Trigger Assembly

02-3 Washer

02-4 M3X10 Combine Screw

02-5 POM Bushing (front)

02-6 Back Receiver

02-7 POM Bushing (back)

02-8 Pin

02-9 Safety Housing

02-10 Screw

02-11 Washer

02-12 Safety Bar

02-13 Positioning Ball

02-14 Positioning Spring

02-15 Set Screw

02-16 Safety Pin

02-17 Lock Piece

02-18 Pressure Spring

02-19 Safety Roller Sub-assy

02-20 Pivot Pin

02-21 M2.5X8 Combine Screw (2 pcs)

02-22 Enlarge Cylinder Head

02-23 O-ring

02-24 Enlarged Air Brake Piston Head

02-25 Enlarge Piston

02-26 9mm Irregular-pitch Spring

02-27 Enlarge Spring Guide

02-28 Enlarge Bolt

02-29 Bolt Handle

 
02-30 Bolt Clip Pin

02-31 Bolt Clip Spring

02-32 End Cap

02-33 End Cap Screw

03

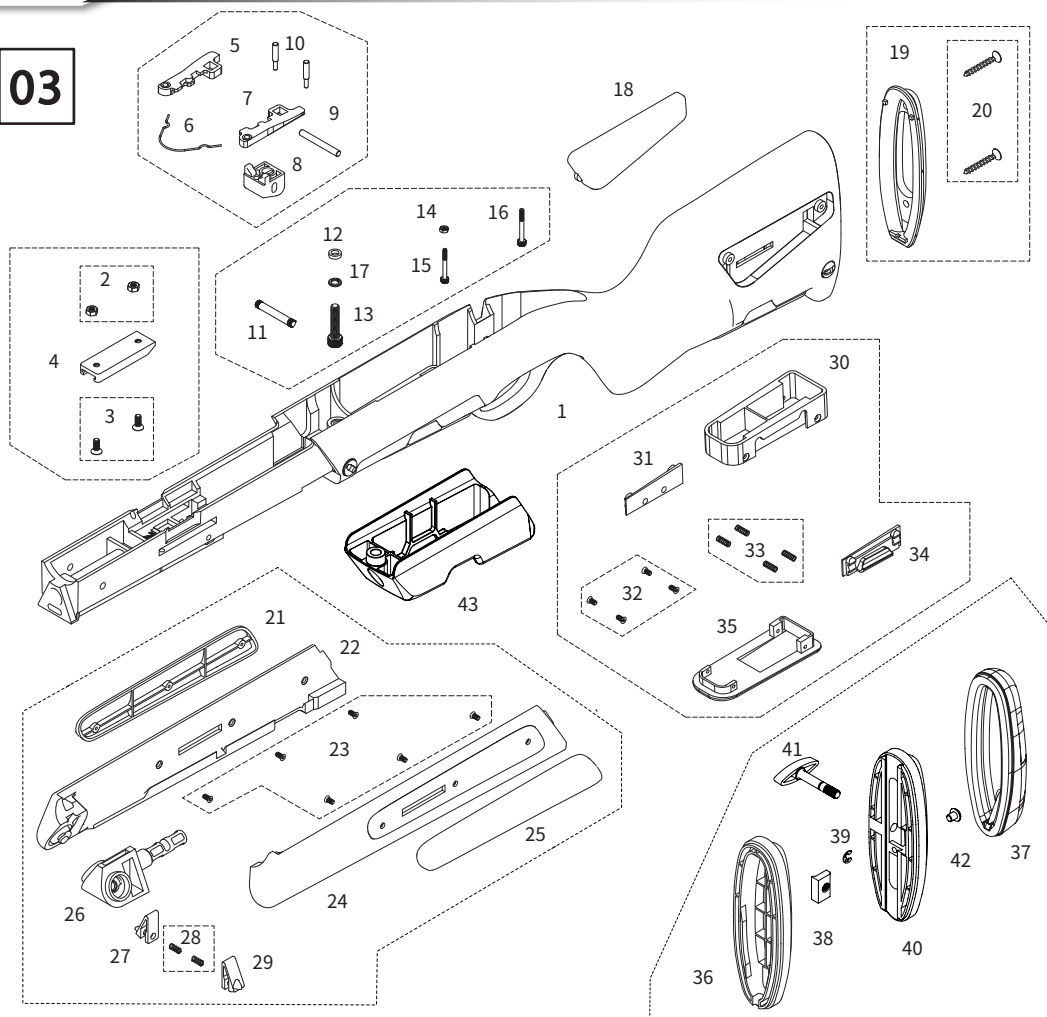

03-1 Stock Body

03-11 Bipod Takedown Pin

03-21 Right Grip Rail

03-31 Right Snap Latches

03-41 Adjustment Screw

03-2 Nut (2 pcs)

03-12 Bedding Washer

03-22 Right Bipod Body

03-32 M3X6 Screw (4 pcs)

03-42 M5x6 Position Screw

03-3 M4X10 Rail Screw (2 pcs)

03-13 Takedown Screw (front)

03-23 M2.5X6 Screw (6 pcs)

03-33 Spring (4 pcs)

03-43 Enlarge Magwell

03-4 Rail

03-14 Nut

03-24 Left Bipod Body

03-34 Left Snap Latches

03-5 Right Lever Retainer

03-15 M3X8 Screw

03-25 Left Grip Rail

03-35 Fake Bottom Magazine

03-6 Spring

03-16 Takedown Screw (rear)

03-26 Bipod Swivel Body

03-36 Spacer

03-7 Left Lever Retainer

03-17 Washer

03-27 Right Spring Clip

03-37 Butt Plate

03-8 Lever Actuator

03-18 Left Stock Insert

03-28 Spring (2 pcs)

03-38 Square head bolt

03-9 Pin

03-19 Butt Stock Cove

03-29 Left Spring Clip

03-39 E-clip

 
 
 
 
03-10 Pin

03-20 Screw

03-30 Fake Body Magazine

03-40 Adjustment Spacer

04

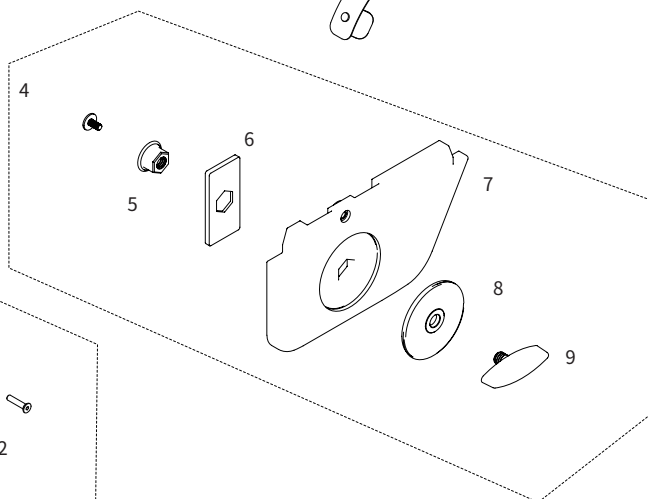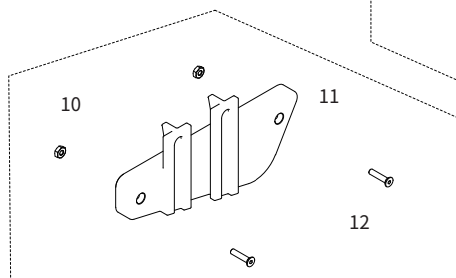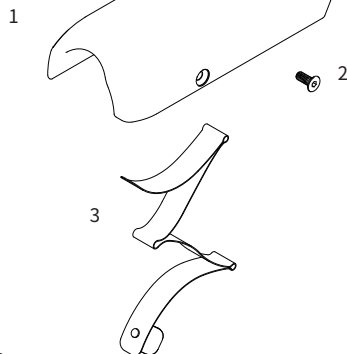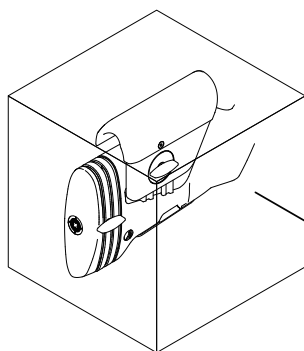

04-1 Cheek Rest

04-2 M4x10 Combine Screw

04-3 Spring

04-4 M3x6Screw

04-5 Hex Head Bolt

04-6 Washer

04-7 Side Plate

04-8 Washer

 
04-9 Adjustment Screw

04-10 M2.5 Bolt (2pcs)

02-11 Base Plate

02-12 M2.5x12 Screw (2pcs)

05

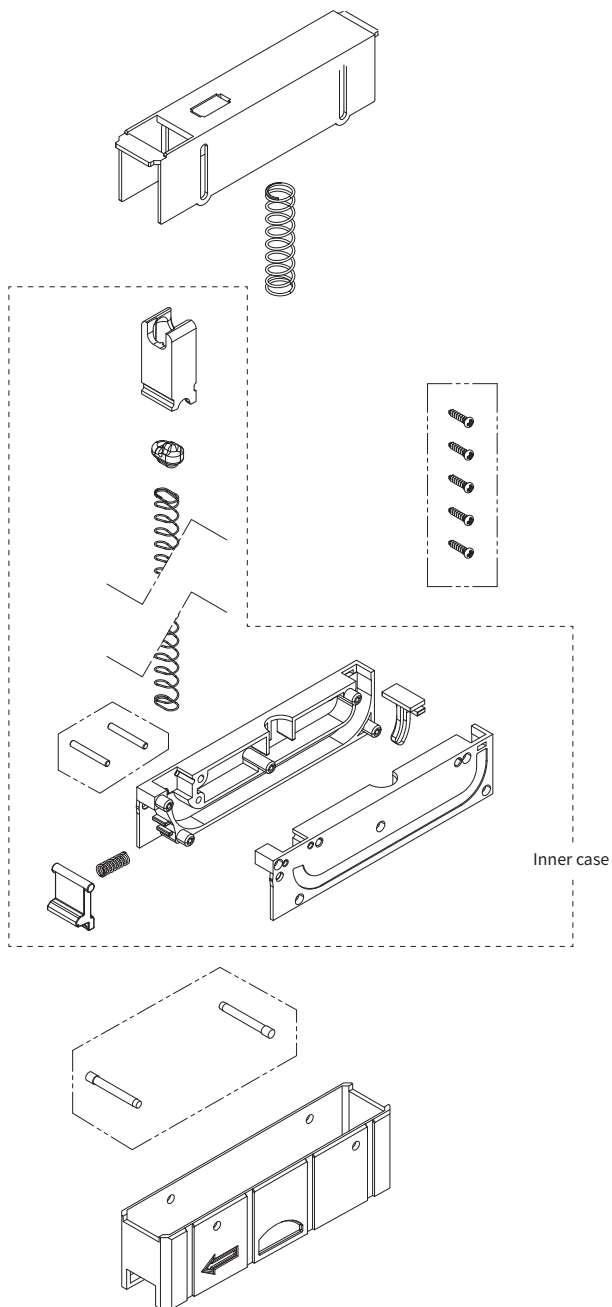



STEYR ARMS GmbH, Austria, and the Steyr logo
are registered trademarks of STEYR ARMS GmbH
- www.steyr-arms.com - and are used for airsoft replicas under license
from ActionSportGames| A/S, Denmark - www.actionsportgames.com.



Manufactured by Modify-tech
www.modify-tech.com
No.21, Ln. 384, Yongfeng Rd.,
Bade Dist, Taoyuan County 334015, Taiwan